

PITOT ACCESSORY KIT


USER GUIDE

Item#: HMBSG

OVERVIEW

The Pitot Accessory Kit includes the internal components for installing the Pitot in the 2 ½" Hose Monster®.

COMPONENTS

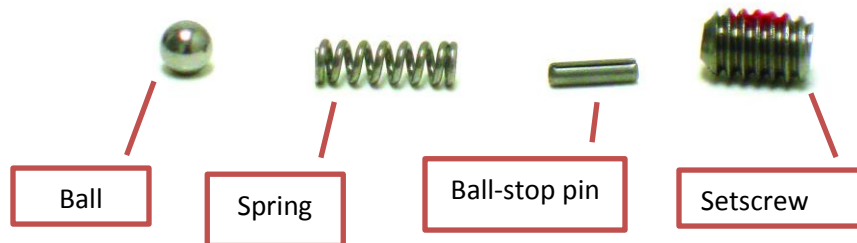

ASSEMBLY INSTRUCTIONS

- 1) Remove old setscrew, ball, spring and ball-stop pin.
- 2) Insert a dab of grease into hole.
- 3) After pitot is installed, insert ball and push home into pitot groove.
- 4) Carefully place ball-stop pin inside the spring coils.
- 5) Place the spring and pin in the hole and push home.
- 6) Tighten setscrew in hole until pitot locks.
- 7) Loosen setscrew a quarter turn. Installation is complete.